 


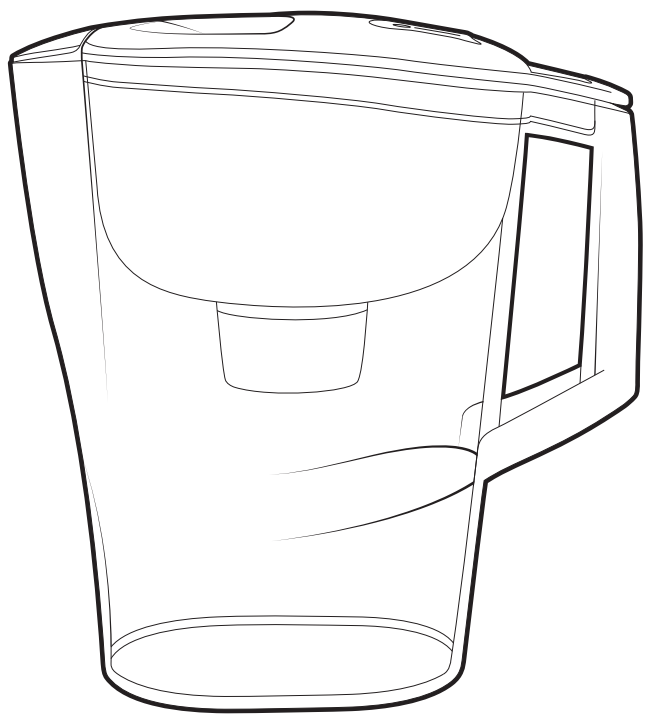

10-Cup Water Pitcher with Filter
Pichet de 10 Tasses Muni d'Un Filtre
Jarro de Agua De 10 Tazas Con Filtro
B07YT18P21

1. IMPORTANT SAFEGUARDS



Read these instructions carefully and keep them for future use. If this product is passed to a third party, then these instructions must be included.

When using the product, basic safety precautions should always be followed to reduce the risk of injury including the following:

- ▶ The water filter system is designed for use only with microbiologically and chemically safe drinking water (municipally treated tap water or water from private supplies which has been tested as safe to drink). Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. If an instruction is received from authorities that water must be boiled, the filtered water must also be boiled. When the instruction to boil water is no longer in force, the entire system must be properly cleaned and a new cartridge inserted.
- ▶ Filter cold water only (maximum temperature: 85 °F / 29 °C, minimum temperature: 33 °F / 0.6 °C).
- ▶ For certain groups of people (e.g. those with impaired immunity and for babies), it is generally recommended that tap water should be boiled; this also applies to filtered water. Irrespective of the water used, you should use utensils with stainless steel, such as kettles and saucepans, to boil the water. In particular, people who are sensitive to nickel should use appliances made of stainless steel or kettles with concealed elements.
- ▶ The filter has been specially treated with silver to preserve the filter media and inhibit the growth of bacteria that may affect the filter media. The antimicrobial properties of the treated filter media do not protect users or others against bacteria, viruses, germs or other disease organisms. A very small amount of silver may be transferred to the water. This transference would be within the World Health Organization (WHO) guidelines.
- ▶ During the filtering process, there may be a slight increase in potassium content. Note that 0.26 gallons (1 liter) of filtered water contains less potassium than an apple or banana. However, if you have kidney disease and/or follow a potassium-restricted diet, we recommend that you consult your doctor before using a water filter.
- ▶ Like any natural product, the consistency of activated carbon is subject to natural variance. This can lead to a slight abrasion of small carbon particles into your filtered water, noticeable as black bits. These particles have no negative health effects and are not harmful if consumed. In case you observe carbon particles, we recommend flushing the filter several times until the black bits disappear.

SAVE THESE INSTRUCTIONS

2. Battery Warnings

⚠ DANGER Risk of explosion!

Risk of explosion if the battery is replaced by an incorrect type.

⚠ WARNING

- ▶ **INGESTION HAZARD:** This product contains a button cell or coin battery.
- ▶ **DEATH** or serious injury can occur if ingested.
- ▶ A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- ▶ **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**.
- ▶ **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- ▶ Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- ▶ Even used batteries may cause severe injury or death.
- ▶ **Emergency Instructions:** Seek immediate medical attention if a battery is swallowed or placed inside any part of the body. If you suspect a battery has been swallowed, immediately contact emergency services or call a local poison control center for treatment information.
- ▶ **Electronic Filter Change Indicator Information:** There is an electronic filter change indicator on the lid of the water filter pitcher. A CR1620 button cell battery is used in the electronic filter change indicator. The button cell battery is non-rechargeable. Non-rechargeable batteries are not to be recharged. Do not attempt to open or break the electronic filter change indicator. Do not remove the button cell battery from the electronic filter change indicator.

Battery specifications	CR1620
Nominal voltage	3 V $\equiv$
Capacity	70-75 mAh
IP rating	IPX7
Battery status	Non-replaceable

- ▶ Do not force discharge, recharge, disassemble, heat or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- ▶ Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- ▶ When used correctly, primary batteries provide a safe and dependable source of portable power. However, misuse or abuse may result in leakage, fire, or explosion.
- ▶ Keep batteries out of the reach of children, especially small batteries that could be easily ingested.
- ▶ Never dispose of batteries in fire. When batteries are disposed of in fire, the heat build-up may cause explosion and personal injury. Do not incinerate batteries except for approved disposal in a controlled incinerator.
- ▶ Never attempt to recharge primary batteries. Attempting to charge a non-rechargeable (primary) battery may cause internal gas or heat generation resulting in venting, leakage, explosion and personal injury.

- ▶ Never short circuit batteries as this may lead to high temperatures, leakage, or explosion. When the positive (+) and negative (–) terminals of a battery are in electrical contact with each other, the battery becomes short-circuited. This may result in venting, leakage, explosion and personal injury.
- ▶ In the event that the electrolyte comes into contact with the skin or eyes, immediately flush with fresh water for at least 15 minutes and seek medical attention.
- ▶ Never heat batteries in order to revive them. When a battery is exposed to heat, venting, leakage and explosion may occur and cause personal injury.
- ▶ Never attempt to disassemble, crush, puncture or open batteries. Such abuse may result in venting, leakage, rupture, and cause personal injury.

3. Intended Use

- ▶ This product is intended for household use only. It is not intended for commercial use.
- ▶ No liability will be accepted for damages resulting from improper use or non-compliance with these instructions.

 
4. Before First Use

DANGER Risk of suffocation!

Keep any packaging materials away from children and pets – these materials are a potential source of danger, e.g. suffocation.

- ▶ Check the product for transport damages.
- ▶ Remove all the packing materials.
- ▶ Clean the product before first use.

5. Product Description

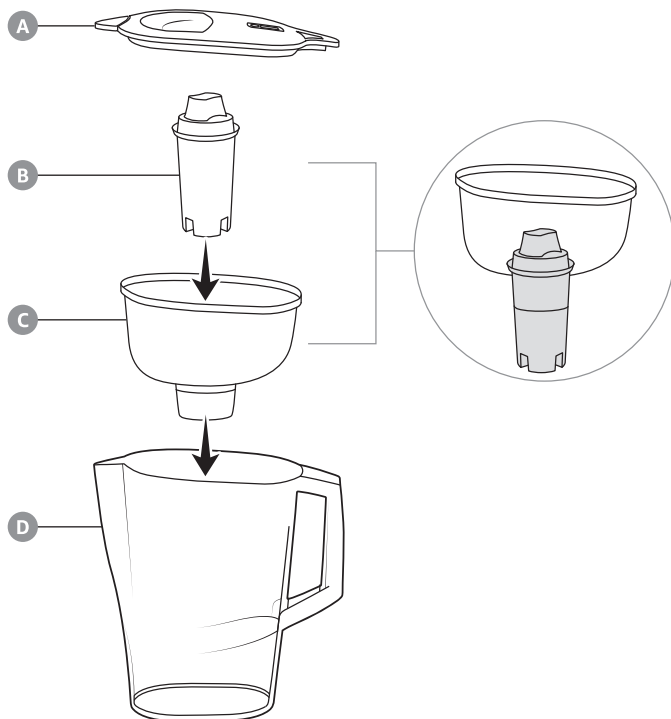


A Lid with filter-change indicator

B Water filter cartridge


C Reservoir

D Pitcher

 6. Instructions For Use

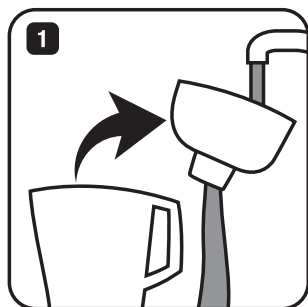

 
Clean the lid, pitcher and reservoir with a mild detergent, not an abrasive cleaner. The pitcher and the reservoir may be washed in the dishwasher (max. 122 °F / 50 °C). The lid is not dishwasher-safe and must be hand-washed.

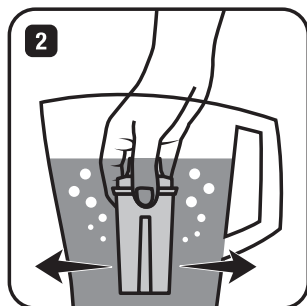


To prepare your water filter cartridge, remove the protective wrapper.

NOTICE The new filter may be damp from the steam treatment process.

 Immerse the filter cartridge in cold water for a few seconds and shake it gently to remove any air bubbles.

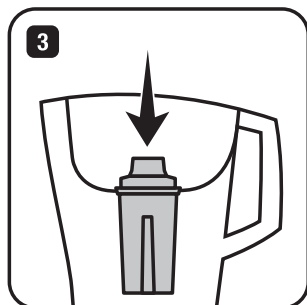

 Place the filter cartridge in the hollow of the reservoir and press firmly down. Ensure the cartridge is placed squarely in the holder.

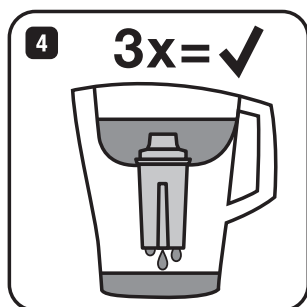


Fill the reservoir with cold tap water and allow the water to filter through. Discard the first two fillings. These first two fillings are used to flush and prepare the filter cartridge. Now re-fill the reservoir and the system is ready for use.

6.1 Filter replacement

- For optimum performance, replace the filter after 40 gallons / 151 liters or approximately once every 2 months for an average family. You may need to change your filter cartridge more often depending on the amount of water you consume and/or the degree of water hardness. Amazon Basics Replacement Filters are available as B07YT16TMS (3-pack) and B07YT1NTCX (6-pack).


6.2 Starting/resetting the electronic filter change indicator

 5

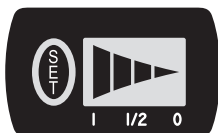


The electronic filter-change indicator measures the recommended time of use of your filter cartridge and automatically reminds you when to change it. The indicator needs to be reset every time a new filter cartridge is inserted.

 6

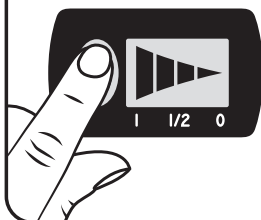

To start the indicator, press and hold down the **SET** button until all four bars appear in the display and flash twice. The indicator is now set.

 7

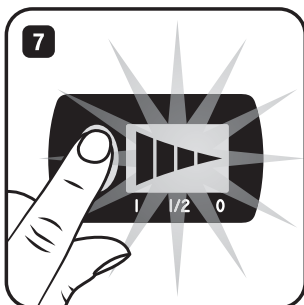

After 15 days/filter one bar will disappear to show the remaining cartridge life. Change the cartridge when all the bars have disappeared after approximately 2 months (60 days). A new filter cartridge should be prepared and inserted and the indicator reset as above.

- At the end of the indicator life, remember that it is an electronic device and to dispose of it according to all applicable provisions and regulations.
- To remove the exhausted indicator place the screwdriver in the notch next to the indicator and push it out. Note that the indicator should not be removed for any other reason than to dispose of it.

NOTICE

The indicator should not be removed for any other reason than to dispose of it.

7. Cleaning and Maintenance

- Keep your water filter system out of sunlight and away from heating elements, e.g. oven, stove, coffee machine. We recommend you store your water filter in a cool and dry place.
- Consume filtered water within 1 day.
- Wash the parts of your filter system regularly in warm soapy water, at least every time you change the filter cartridge. Do not use any abrasive cleaners.

NOTICE

The jug and the reservoir may be washed in the dishwasher (max. 122 °F / 50 °C). The lid must not be washed in the dishwasher due to the electronic filter-change indicator.

- Should your system not be in use for a prolonged period (e.g. vacation), we recommend that you take out the filter cartridge, discard any water left inside the water filter and insert the filter again. Before using the water filter again, repeat steps 1 to 4 in "Instructions For Use".
- If your water filter pitcher has been in contact with food that is likely to cause discoloration (e.g. tomato ketchup, mustard), clean your pitcher promptly. To avoid possible discoloration of your pitcher, do not include it in a dishwasher containing dirty dishes from such foods.

8. Specifications / Performance Data Sheet

Amazon Basics 10-Cup Water Pitcher with Filter Model # 1038354 ASIN B07YT18P21

Amazon Basics Replacement Filters: available models #1038346 ASIN B07YT16TMS (3-pack), #1038349 ASIN B07YT1NTCX (6-pack)

These products are for markets of the US and Canada.

Rated capacity:	40 gallons (151 L)
Recommended use:	2 gallons (7.6 L) per day
Rated service flow:	2gd
Recommended filter replacement:	every 2 months

You may need to change your filter cartridge more often depending on the amount of water you consume and/or the degree of water hardness.

NOTICE

Read this performance data sheet and compare the capabilities of this unit with your actual water treatment needs. It is recommended that, before purchasing a water treatment unit, you have your water supply tested to determine your actual needs.

System is tested and certified by the WQA against NSF/ANSI 42 and 53 for the reduction of: Chlorine taste and odor, copper, mercury and benzene. Reduction of limescale is internally tested and not certified by WQA. The concentration of the indicated substances in water entering the system was reduced to a concentration less than or equal to the permissible limit for water leaving the system, as specified in NSF/ANSI 42 and 53.