
# REPLACEMENT C-CLIPS

## About your C-clip

Your citrus press is fitted with a fruit dome. This fruit dome is easily removed for cleaning. Due to constant removal of this part, Breville has supplied 4 additional C-clips. If the fruit dome becomes loose, please use a spare C-clip to replace the old one.

*The spare C-clips are located in the attached sachet bag.*

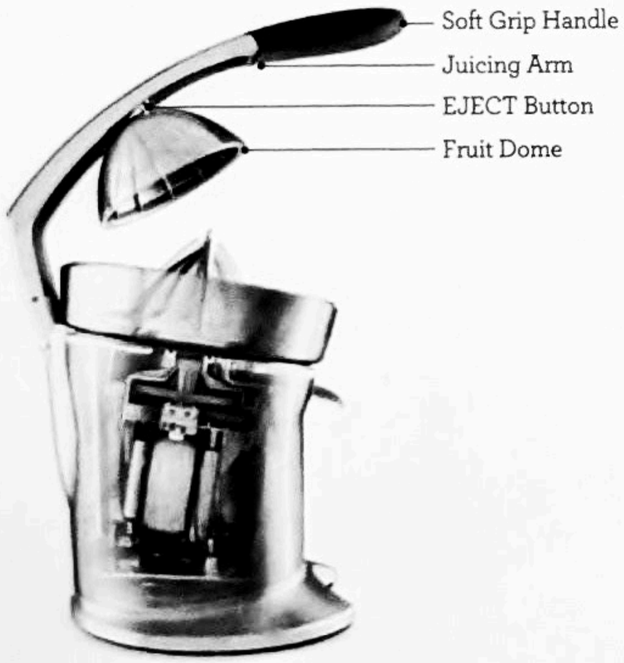


## Attaching the C-clips

1. With the juicing arm in the down position, remove the fruit dome by pressing the button marked "EJECT". Let the fruit dome drop onto the juicing cone. **Fig.1**

   *You will locate the C-clip half way down the EJECT button. It is a "C" shape plastic washer which can be removed.* **Fig.2**

2. With your thumb holding the washer, use your finger to pull one side of the C-clip up and over the EJECT button. Pull C-clip off. **Fig.3**

3. With the new C-clip, gently open the ends enough to slide it over the EJECT button and slot into place.

4. Insert the fruit dome onto the underside of the juicing arm by aligning the tab on the top of the fruit dome with the hole in the juicing arm. Hold onto the soft grip handle and press the fruit dome up and backwards until the fruit dome locks into position.

   *The fruit dome is keyed and can only be inserted one way. This ensures it does not rotate during operation.* **Fig.4**

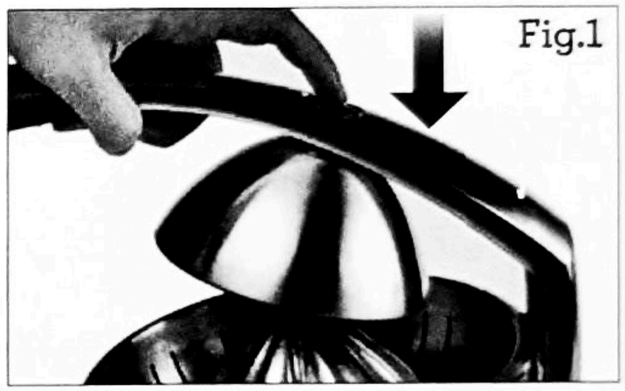
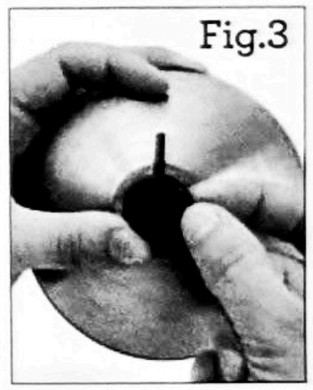

Fig.1



Fig.2


Fig.3

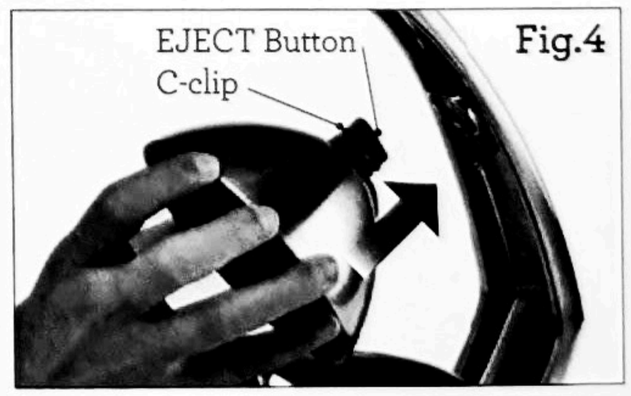


Fig.4