
KitchenAid®

Corded Hand Blender
KHBV53



PARTS AND FEATURES

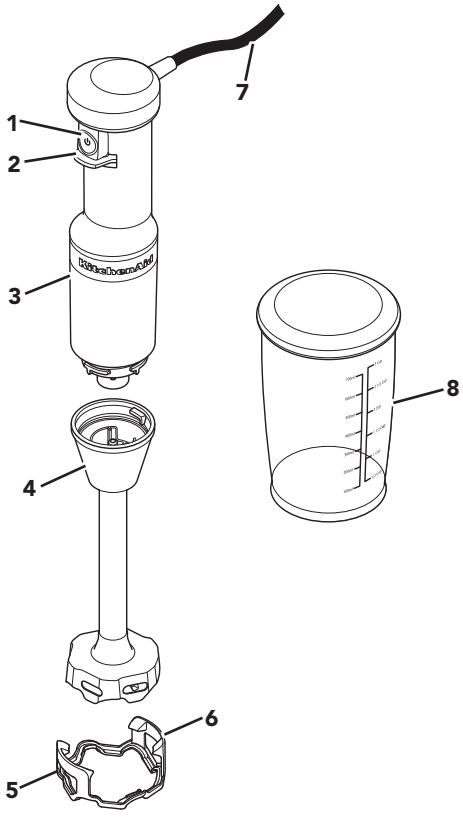

1 Variable speed controller

2 Speed controller guard

3 Motor body

4 Blending arm 8" (20.3 cm)

5 Pan guard - Use the pan guard to avoid damage to cookware while using the Hand Blender

6 Mounting clips

7 Power cord (5 ft.)

8 3 cup (700 ml) BPA-free Blending jar with lid

PRODUCT SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word “DANGER” or “WARNING.” These words mean:

⚠ DANGER **You can be killed or seriously injured if you don’t immediately follow instructions.**

⚠ WARNING **You can be killed or seriously injured if you don’t follow instructions.**

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. To protect against risk of electrical shock do not put motor body, cord, or electrical plug of this Hand Blender in water or other liquid.
3. This appliance should not be used by children and care should be taken when used near children.
4. Avoid contacting moving parts.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number for information on examination, repair, or adjustment.
6. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
7. Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
8. Do not use the appliance outdoors.
9. Do not let cord hang over edge of table or counter.
10. Do not let cord contact hot surfaces, including the stove.
11. When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage.

PRODUCT SAFETY

12. Keeps hands and utensils out of the container while blending to prevent the possibility of severe injury to persons or damage to the unit. A scraper may be used but must be used only when the unit is not running.
13. Blades are sharp. Handle carefully.

SAVE THESE INSTRUCTIONS

This product is designed for household use only.

ELECTRICAL REQUIREMENTS

Voltage: 120 V

Frequency: 60 Hz

Wattage: 180 Watts

NOTE: Your product has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug will fit in an outlet only one way. If the plug does not fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.
Do not modify the plug in any way.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or service technician install an outlet near the appliance.

Use the product power cord to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

NOTE: Maximum rating is based on the chopper accessory, included with KitchenAid® model KHBBV83.
Other attachments may draw different power or current.


PRODUCT USAGE

Before first use, clean all parts (see "Care and Cleaning" section).

ASSEMBLING THE BLENDING ARM


IMPORTANT: Always unplug the Hand Blender, before attaching or removing parts.

1



Insert the Blending arm into the Motor body and twist until it clicks to lock in place.

2

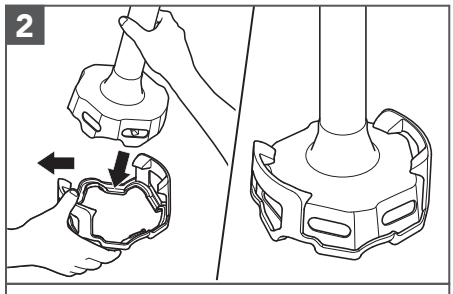


If using a Pan guard, place it on a flat surface.
To insert the Pan guard, angle the blending arm to one side of the mounting clip. Then, gently pull the other mounting clip outward and push down the blending arm. Ensure the mounting clips are secured into place.

NOTE: U.S. patent pending removable pan guard to help protect your cookware.

USING THE BLENDING ARM

Use for smoothies, milkshakes, soup, cooked vegetables, frosting, or baby food, etc.

1

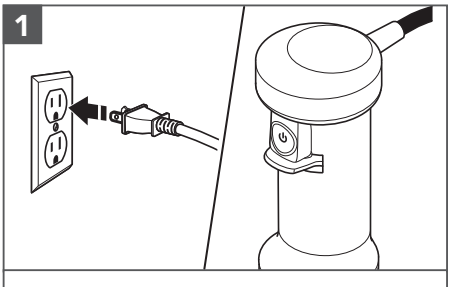


Plug the Hand Blender into a grounded electrical outlet.

PRODUCT USAGE

2

Blending

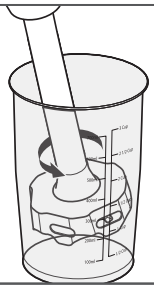


Insert the Hand Blender into the mixture. Press the Variable speed controller to start.
Use your free hand to cover the top of the blending jar for better stability and avoid splashing.

NOTE: Do not immerse Motor body into liquids or other mixtures.

3


Drawing up

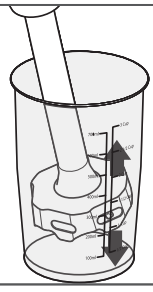

Use the draw up motion with the Hand Blender to move the ingredients within the jar.
Slowly draw it upwards against the side of the jar. Repeat the process until the ingredients are at the desired consistency.


4

Wrist movement

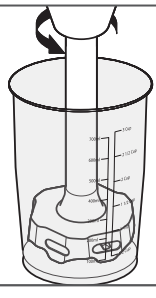

With your wrist, make a circular motion to draw the Hand Blender up slightly and let it blend again into the ingredients.

5

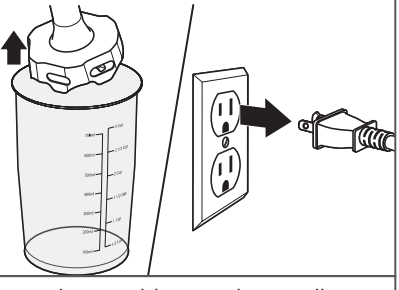


Release the Variable speed controller to stop; then remove Hand Blender from mixture.
Unplug the Hand Blender before removing or attaching the parts.

NOTE: Chopper and Whisk accessories included with KitchenAid® Model KHBBV83 can be used on this model.

CARE AND CLEANING


IMPORTANT: Always unplug the Hand Blender before attaching or removing parts.

1

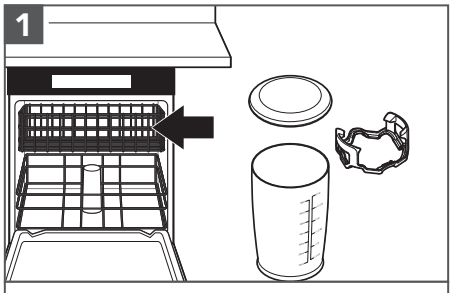

Dishwasher safe parts - top rack only:
Blending jar, Lid, and Pan guard in the top rack.
Wash Blending arm in hot, soapy water.

2

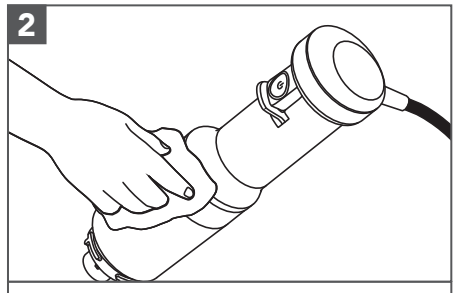

Wipe the Motor body with a damp cloth. Mild dish soap may be used, but do not use abrasive cleansers.

For detailed information on the Hand Blender:
Visit www.kitchenaid.com/quickstart for additional instructions with videos, inspiring recipes, and tips on how to use and clean your Hand Blender.

TROUBLESHOOTING GUIDE

Problem	Solution
If the Hand Blender fails to start:	Check to see if the Hand Blender is securely plugged into a grounded electrical outlet.
	If you have a circuit breaker box, check to make sure that the circuit is closed.
If the Hand Blender stops while blending:	When overloaded or jammed, it will automatically shut off to prevent motor damage. Divide contents into smaller batches. For certain recipes, adding liquid in the Jar may also reduce the load.
If the problem cannot be corrected:	See the “Warranty and Service” section. Do not return the Hand Blender to the retailer. Retailers do not provide service.